

How to Apply BOROPHENE the Right Way?



Before You Begin


- 1) Wash 2) Machine Polish 3) Degrease

4) Application



Step 1:

Gently shake the Borophene bottle.

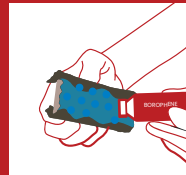

Step 2:

Open the lid and apply a generous amount to a dry, new applicator pad.



Step 3:

Apply the coating in a cross-hatch pattern on a small area. Ensure the coating is applied evenly to avoid any high spots.



Step 4:

Wipe off the coating immediately (max 30 seconds) after application on the panel. Use two microfiber cloths to wipe off the coating: one to remove most of the coating and the second to wipe off any leftover residue.



Step 5:

The vehicle can be driven after 24 hours. However, avoid manual washing for upto 7 days & reduce contact with water if possible.

How to Maximize Results?

- ✓ Work small sections at a time
- ✓ Avoid direct sunlight.
- ✓ Inspect the surface to ensure no spots are missed.
- ✓ Use minimum 380 gsm cloths to wipe off coating for the best results.

Please note: The ceramic coating can be multi-layered after a 40-minute interval.