



## STEP 01

### WASHING

Wash the surface with pH neutral shampoo to remove excess dirt or residue.



## STEP 02

### MACHINE POLISH

Machine polish the surface to remove any imperfections.



## STEP 03

### DEGREASE

Remove polish residue using diluted Isopropyl Alcohol (IPA). Dilute the IPA in 30% water.




## STEP 04

### PROLONG LIGHT COATING APPLICATION

Apply Prolong Light coating for optimal protection.

## How to Apply Prolong Light?

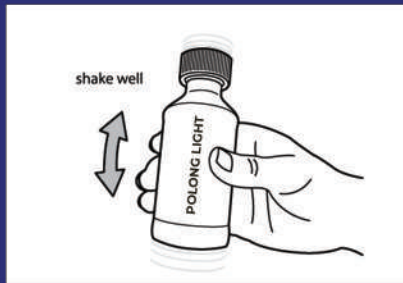


**A**

Gently shake the Prolong Light bottle.



**B**

Open the lid and apply a generous amount to a dry, new applicator pad.

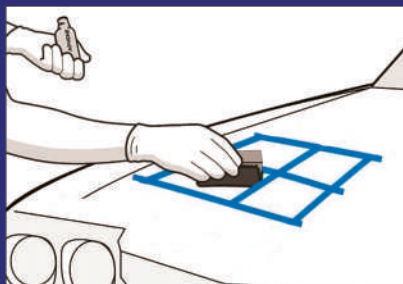


**C**

Work in small areas, ensuring even application.



**D**

Allow the product to dry for 30 seconds. Use two 380 gsm microfiber cloths: one to wipe off the bulk of the coating and the other to wipe off any remaining residue. Inspect the surface to ensure no spots are missed.

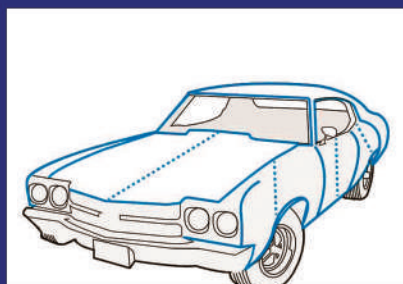

**E**

The coating is touch to dry in 2 hours. However, avoid manual washing for up to 7 days.

Click Here For:

[APPLICATION TIPS](#)

[APPLICATION INSTRUCTIONS](#)

**Note:** The coating can be multi-layered after a 40-minute interval. Use a minimum of 1 bottle per vehicle; if any coating remains after the first layer, apply it to high-exposure areas like the roof and bonnet.